

iPLC510 update (new)

Prerequisites

- WinSCP
- PuTTY
- Update package softplcrt_2.6.0.4-r3_cortexa7t2hf-neon.ipk

Update

- Start WinSCP and login to the PLC
 - o **Transmission Protocol** – SCP
 - o **Host** - PLC IP address
 - o **Port number** – 22
 - o **Username** – root
 - o **Password** – "code", where the default password ("code") is written on the side of the device on the label. Until S/N 136558: SCP user / password: root / sharkXXXX, where XXXX is the last 4 digits of the serial number (see side label).
- Copy the file softplcrt_2.6.0.4-r3_cortexa7t2hf-neon.ipk to the /var/volatile/tmp directory
- Start PuTTY and use the "q" key to exit the start menu to the command line
- Enter the commands below:
 - o cd /tmp
 - o opkg install ./softplcrt_2.6.0.4-r3_cortexa7t2hf-neon.ipk -> wait for successful installation
 - o sync
 - o reboot