

iPLC510 update (new) Prerequisites

- WinSCP
- PuTTY
- Update package `softplcrt_2.6.0.4-r1_cortexa7t2hf-neon.ipk`

Update

- Start WinSCP and login to the PLC
 - Transmission Protocol – SCP
 - Host - PLC IP address
 - Port number – 22
 - Username – root o Password – "code", where the default password ("code") is written on the side of the device on the label. Until S/N 136558: SCP user / password: root / sharkXXXX, where XXXX is the last 4 digits of the serial number (see side label).
- Copy the file `softplcrt_2.6.0.4-r1_cortexa7t2hf-neon.ipk` to the `/var/volatile/tmp` directory
- Start PuTTY and use the "q" key to exit the start menu to the command line
- Enter the commands below:
 - `cd /tmp`
 - `opkg install ./softplcrt_2.6.0.4-r1_cortexa7t2hf-neon.ipk -> wait for successful installation`
 - `sync`
 - `reboot`