

Applicable for upgraded firmware v1.0.0 and newer:

1. open the web page of the R090, go to Administration, and upload the new firmware file (R090_fw_x_x_x.bin)
2. power off / on the R090
3. connect to the R090 over FTP (name / password: root / root99)
4. delete all web pages which are in the R090
5. copy the new web pages from your PC to the R090
6. disconnect the FTP server
7. power off / on the R090

Applicable for upgraded firmware older than v1.0.0 (RC – release candidate versions):

1. open the web page of the R090, go to Administration, and upload the new firmware file (R090_fw_x_x_x.bin)
2. set the INIT switch at R090 to ON
3. power off / on the R090
4. the IP address of R090 is 192.168.1.99 now
5. go to the R090 web pages, Conf
6. click the Write button
7. connect to the R090 over FTP (name / password: root / root99)
8. delete all web pages which are in the R090
9. copy the new web pages from your PC to the R090
10. disconnect the FTP server
11. set the INIT switch to OFF
12. power off / on the R090
13. set the new IP address of the module, and all other settings.