

THERMASGARD® ETF 7

CZ Návod k použití

Šroubovací ponorné čidlo teploty
s hrdlovou trubicí (jednostupňovou),
s pasivním výstupem

GB Operating Instructions, Mounting & Installation

Screw-in / immersion temperature sensors
with neck tube (one-step)
with passive output



domat
CONTROL SYSTEM

Domat Control System s.r.o.
U Panasonicu 376
530 06 Pardubice-Stare Covice
CZ Česká republika

Tel.: +420 461 100 823
Fax: +420 226 013 092

mail@domat.cz

www.domat-int.com

Gratulujeme!

Zakoupili jste produkt německé kvality.

Congratulations!

You have bought a German quality product.



Provedení krytu odolné vůči vibracím,
mechanickému namáhání a vlhkosti.

High-performance encapsulation against
vibration, mechanical stress and humidity





PS-PROTECTION

PERFECT SENSOR PROTECTION

Rozměry
Dimensional drawing


ETF 7

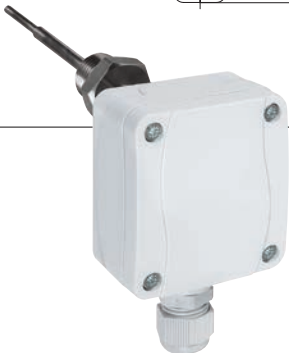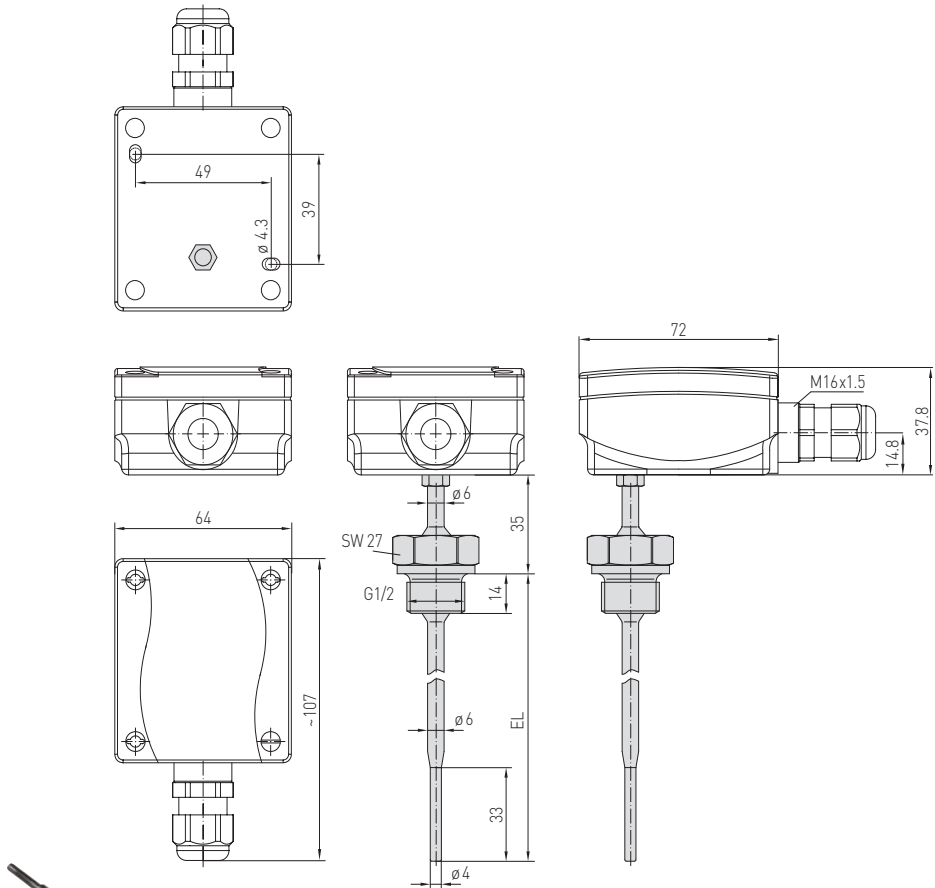

ETF 7
s rychloupínacími šrouby
with quick-locking screws

Instalační schéma
Mounting diagram




TH

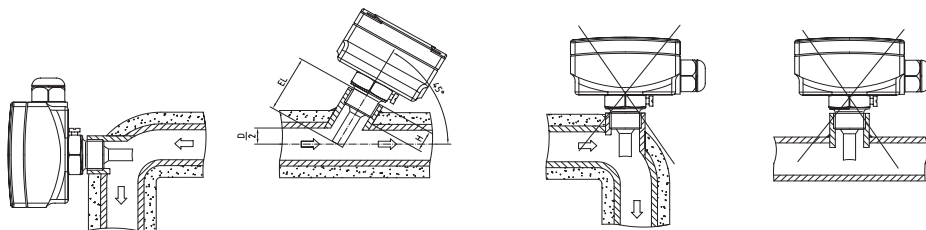

Šroubovací odporové teplotní čidlo s velmi rychlou odezvou **THERMASGARD® ETF 7** s pasivním výstupem, hrdlovou trubicí a nerezovou ochrannou trubicí z ušlechtilé oceli, víko krytu s rychloupínacími šrouby, velmi krátká reakční doba, zvláště vhodná pro velmi rychlé změny teploty a regulační operace, např. v hydraulických systémech.

TECHNICKÉ ÚDAJE

Měřicí rozsahy:	-35...+150 °C
Senzory / Výstup:	viz tabulka, pasivní (Perfect Sensor Protection)
Doba odezvy:	$t_{0,5} = 2,8\text{ s}$ $t_{0,9} = 10\text{ s}$ (v případě vody s rychlostí proudění 2 m/s)
Zapojení:	2-svorkové zapojení (4-svorkové zapojení s PT100, s dalšími senzory volitelně)
Měřicí proud:	< 0,6 mA (Pt1000) < 1,0 mA (Pt100) < 0,3 mA (Ni1000, Ni1000 TK5000)
Izolační odpor:	≥ 100 MΩ, při +20 °C (500V DC)
Elektrické připojení:	0,14 - 1,5 mm ² , přes šroubové svorky
Kabelová průchodka:	M 16 x 1,5 ; s odlehčením tahu, vyměnitelná, max. vnitřní průměr 10,4 mm
Kryt:	Plast, odolný proti UV záření, materiál Polyamid, 30% vystužená skelným kuličkami, s rychloupínacími šrouby (kombinace s drážkou / hlavou Phillips), barva dopravní bílá (podobná RAL9016)
Rozměry krytu:	72 x 64 x 37,8 mm (Tyr 1)
Ochranná trubice:	Nerezová ocel V4A (1.4571), G ½", SW 27, $p_{max} = 6\text{ bar}$, $\varnothing = 6\text{ mm}$, zkosený do $\varnothing = 4\text{ mm}$ (viz rozměrový výkres) délka hrdla (HL) = 25 mm montážní délka (EL) = 100 - 250 mm (viz tabulka)
Provozní připojení:	Šroubovací objímka se závitem G ½"
Připustná vzdušná vlhkost:	< 95% r. H., bez kondenzujících par
Třída ochrany:	III (podle EN 60730)
Stupeň krytí:	IP 65 (podle EN 60529)

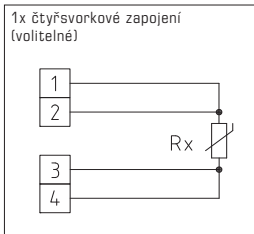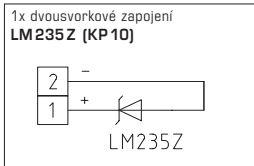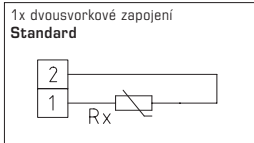

THERMASGARD® ETF 7 Šroubovací ponorné čidlo teploty s hrdlovou trubicí		
Type / WG01	Senzor / Výstup	Označení
ETF7 PT100 xx	Pt100	
ETF7 PT100 100MM	Pt100 (podle DIN EN 60751, třída B)	9101-2080-1023-00001
ETF7 PT100 150MM	Pt100 (podle DIN EN 60751, třída B)	9101-2080-1033-00001
ETF7 PT100 250MM	Pt100 (podle DIN EN 60751, třída B)	9101-2080-1053-00001
ETF7 PT1000 xx	Pt1000	
ETF7 PT1000 100MM	Pt1000 (podle DIN EN 60751, třída B)	9101-2080-5021-00001
ETF7 PT1000 150MM	Pt1000 (podle DIN EN 60751, třída B)	9101-2080-5031-00001
ETF7 PT1000 250MM	Pt1000 (podle DIN EN 60751, třída B)	9101-2080-5051-00001
ETF7 Ni1000 xx	Ni1000	
ETF7 Ni1000 100MM	Ni1000 (podle DIN EN 43760, třída B, TCR = 6180 ppm/K)	9101-2084-2021-00001
ETF7 Ni1000 150MM	Ni1000 (podle DIN EN 43760, třída B, TCR = 6180 ppm/K)	9101-2084-2031-00001
ETF7 Ni1000 250MM	Ni1000 (podle DIN EN 43760, třída B, TCR = 6180 ppm/K)	9101-2084-2051-00001
ETF7 Ni1000TK xx	Ni1000 TK5000	
ETF7 NITK 100MM	Ni1000 TK5000 (TCR = 5000 ppm/K), LG-Ni1000	9101-2081-0021-00001
ETF7 NITK 150MM	Ni1000 TK5000 (TCR = 5000 ppm/K), LG-Ni1000	9101-2081-0031-00001
ETF7 NITK 250MM	Ni1000 TK5000 (TCR = 5000 ppm/K), LG-Ni1000	9101-2081-0051-00001

Obecné informace

Měřicí princip teplotních čidel pro VVK [obecně]:

Princip měření u teplotních senzorů spočívá v měření změny teplotně závislého odporu vnitřního prvku.

Typ vnitřního senzoru určuje výstupní signál. Typy aktivních / pasivních teplotních senzorů jsou:

- a) Pt 100 (podle DIN EN 60 751)
- b) Pt 1000 (podle DIN EN 60751)
- c) Ni 1000 (podle DIN EN 43 760, TCR=6180 ppm/K)
- d) Ni 1000_TK5000 (TCR=5000 ppm/K)
- e) LM235Z, polovodič IC (10mV/K, 2,73V/°C), při připojování věnujte pozornost polaritě +/- !
- f) NTC (podle DIN 4407D)
- g) PTC
- h) KTY-křemíkové teplotní senzory

Nejdůležitější odporové charakteristiky jsou uvedeny na poslední straně tohoto návodu na použití. Podle jejich charakteristik jednotlivé teplotní senzory vykazují rozdílné "křivky" v rozsahu 0 až +100 °C. Maximální možné měřicí rozsahy se mezi čidly liší (pro některé příklady viz technická data).

Konstrukce snímačů teploty pro VVK obecně:

Čidla se rozlišují podle typu konstrukce: příložné snímače teploty, kabelové snímače teploty, uzavřené a vestavěné snímače teploty.

- Příložná čidla teploty mají minimálně jeden kontaktní povrch, který je třeba připojit např. na radiátor nebo trubku. Pokud není kontakt správně umístěn vzhledem k povrchu, může dojít k výrazným chybám měření. Dbejte na zajištění správného kontaktu a teplotní vodivosti. Vyvarujte se nečistot a nerovností povrchu. V případě potřeby je vhodné užít teplovodní pasty.
- U kabelových čidel teploty je čidlo je umístěno uvnitř jímkou, ze které je vyveden připojitelný kabel. Kromě standardních izolačních materiálů - PVC, silikonu a skelného vlákna s opletem z nerezové oceli - jsou možné další varianty, které mohou rozšířit možnosti použití.
- U uzavřeného typu čidel je čidlo teploty zabudováno v krytu. Dostupné jsou různé druhy krytů, např. s vnější objímkou čidla (viz snímač ATF2). Uzavřené snímače se běžně dělí na snímače pod omítku (FSTF) a povrchovou montáž (RTF, ATF) a verze pro použití v interiérech a vlhkém prostředí. Svorky se nacházejí na desce uvnitř krytu.
- U trubkových a vestavěných čidel teploty rozlišujeme čidla s výměnnou měřicí vložkou a bez výměnné měřicí vložky. Připojovací části se nachází v připojovací hlavici. Standardní připojení ponorných čidel je pomocí G-závitu, pro kanálová čidla je připojení zajištěno montážní přírubou. Pokud je jímkové čidlo umístěno v prodlužovací trubici, je jeho teplotní rozsah obvykle poněkud větší, jelikož stoupající teplo nemůže proudit přímo do připojovací hlavy. Dbejte na to zejména při instalaci čidla. U vestavěných senzorů je čidlo vždy umístěno v přední části ochranné objímky. Pro snímače teploty s nízkou dobou odezvy jsou ochranné objímky zúžené.

Pozor !

Zvolte hloubka ponoru u zabudovaných senzorů, tak aby chyba způsobená rozptylem tepla zůstala v přijatelných mezích. Standardní hodnota je: 10 x průměr ochranné trubice + délka senzoru. U čidel v pouzdrech, zejména u venkovních čidel, prosím zvažte vliv sálavého tepla a přímého oslunění. Pro tyto účely je vhodné použít chrániče proti tepelnému záření SS-Q2.

Maximální teplotní zátěž na zařízení:

V principu by všechny senzory měly být chráněny proti nepřijatelnému přehřátí!

Standardní hodnoty pro jednotlivá zařízení a vybrané materiály jsou uvedeny pro použití v neutrální atmosféře a za obecně normálních podmínek (viz tabulka vpravo).

Pro kombinaci různých izolačních materiálů vždy platí nejvyšší teplotní limit.

Část max. teplotní zatížení

Propojovací kabel

PVC, normální	+70 °C
PVC, tepelně odolné	+105 °C
Silikonový	+180 °C
PTFE	+200 °C
Skelné vlákno s opláštěním z nerezové oceli	+400 °C

Kryt/ Senzor

Viz tabulka "Technické údaje"

Odporové charakteristiky pasivních senzorů teploty [viz poslední strana]

Pro předejití škodám a chybám použijte nejlépe stíněných kabelů.

Vyhnete se pokládání kabelů souběžně s kabely s protékajícím proudem.

Dbejte na dodržování nařízení EMC. Čidla musí instalovat pouze proškolená osoba.

Limitní odchylka podle tříd:

Tolerance při 0 °C:

Platinová čidla (Pt100, Pt1000):

DIN EN 60751, třída B	± 0,3 K
1/3 DIN EN 60751, třída B	± 0,1 K

Niklová čidla:

Ni1000 DIN EN 43760, třída B	± 0,4 K
Ni1000 1/2 DIN EN 43760, třída B	± 0,2 K
Ni1000 TK5000	± 0,4 K

UPOZORNĚNÍ ! Testovací proud ovlivňuje v důsledku ohřevu přesnost teploměru a proto by neměl být v žádném případě větší, než je uvedeno níže:

Proud čidlem, maximální	I _{max}
Pt1000 (tenkovrstvé)	< 0,6 mA
Pt100 (tenkovrstvé)	< 1,0 mA
Ni1000 (DIN), Ni1000 TK5000	< 0,3 mA
NTC xx	< 2 mW
LM235Z	400 µA ... 5 mA
KTY 81 -210	< 2 mA

Montáž a uvádění do provozu

Při připojování musí být zařízení bez napětí. Přístroje mohou být připojeny pouze k bezpečnému nízkému napětí. Následné škody způsobené poruchami tohoto zařízení jsou vyloučeny ze záruky a odpovědnosti. Montáž a uvádění do provozu smí provádět pouze školená osoba. Platné jsou pouze technické údaje a montážní a provozní pokyny dodané se zařízením, či uvedené na jeho štítku. Odchyly od katalogové prezentace nejsou uvedeny samostatně a jsou možné z hlediska technického pokroku a neustálého zlepšování našich produktů. Změny zařízení provedené uživatelem ruší všechny nároky vyplývající ze záruky. Provoz v blízkosti zařízení, které neodpovídá směrnicí EMC, může ovlivnit funkci. Toto zařízení nesmí být používáno pro účely měření, které slouží výhradně k ochraně osob před nebezpečím nebo zraněním, a které se používají jako nouzové vypínače na systémech a strojích nebo pro srovnatelné bezpečnostní úlohy.

Rozměry krytu nebo příslušenství mohou vykazovat malé odchylky od údajů uvedených v tomto návodu.

Změny těchto záznamů jsou zakázány.

Reklamacie bude uznána pouze u zařízení vrácených v kompletním originálním balení.

Naše "Všeobecné obchodní podmínky" společně s "Všeobecnými podmínkami pro dodávky výrobků a služeb v elektrotechnickém a elektronickém průmyslu" (podmínky ZVEI) včetně dodatečné doložky "Výhrady vlastnictví" platí jako výhradní podmínky.

Poznámky k instalaci a připojení:

Při instalaci je nutné přihlídnout k odpovídajícím normám a nařízením platným pro dané místo. Zejména:

- VDE / VDI směrnice vztahující se k technickému měření teploty,
- za všech okolností se vyvarujte paralelní pokládky se silovým vedením
- pokyny a nařízení pro elektromagnetickou kompatibilitu EMC,
- doporučuje se použití stíněných kabelů, se stíněním připojeným jednostranně na straně PLC či vstupních modulů.

Přípustné rychlosti průtoků pro průtokové vodní jímky

Průtok způsobuje vibrace ochranné trubice. Je-li i nepatrně překročena určená rychlost průtoku, může dojít k narušení životnosti ochranné trubice. Vyvarujte se úniku plynů nebo tlakových rázů, které by mohly mít negativní vliv na životnost a mohou způsobit neopravitelné poškození.

Prosím, dodržujte maximální přípustné rychlosti průtoku

Pro ochranné trubice z nerezové oceli 8 x 0,75 mm (1.4571) (viz graf TH 08-VA/xx, TH 08-VA/xx/90) a pro mosaznou ochranné trubice 8 x 0,75 mm (viz graf TH 08-ms/xx):

Před instalací se ujistěte, že technické parametry daného teploměru nejsou v rozporu s aktuálními podmínkami v místě měření, především:

- měřicí rozsah
- maximální přípustný tlak, rychlost proudění,
- rozměry potrubí, montážní délka,
- zamezení oscilací, vibrací a záchvěvů. (< 0,5 g)

Pozor! V každém případě je třeba vzít v úvahu mechanické a tepelné zatížení ochranných trubek podle DIN 43763 nebo podle zvláštních standardů S+!

Poznámky k procesnímu připojení vestavěných čidel:

Pokud je to možné, vyberte snímač, jehož ochranný plášť je z materiálu, který nejvíce odpovídá materiálu potrubí nebo nádrže, ve které bude instalován!

Maximální teploty T_{max} a maximální tlaky p_{max} jsou následující:
pro mosaznou jímku TH-ms je +150 °C, $p_{max} = 10$ bar, a
pro nerezovou jímku TH-VA E (Standard) je +400 °C, $p_{max} = 40$ bar.

Šroubové závity:

Při montáži dbejte na správné umístění těsnění. U šroubových závitů platí pro uťahovací momenty následující hodnoty:

M 18 x 1,5; M 20 x 1,5; G ½" : 50 Nm
M 27 x 2,0; G ¾" : 100 Nm

Montáž příruby:

V případě montáže příruby musí být šrouby na přírubě rovnoměrně utaženy. Boční přítlačný šroub musí být bezpečně upnut, aby hřídel čidla nemohla vyklouznout.



Navarovací objímky:

Je třeba dodržovat zvláštní předpisy pro svařování. V principu se při svařování nesmí vytvořit nerovnosti, které ovlivňují vnitřní čištění systému (CIP). Vysokotlaké vedení vyžaduje tlakové zkoušky a sledování.

Pokyny k uvádění do provozu:




Přístroj byl kalibrován, nastaven a testován za normovaných podmínek. Při provozu za jiných podmínek doporučujeme ruční justování na místě instalace při uvádění do provozu a poté v pravidelných intervalech.

Uvádění do provozu je nutnou součástí instalace a musí být provedeno odborným personálem!

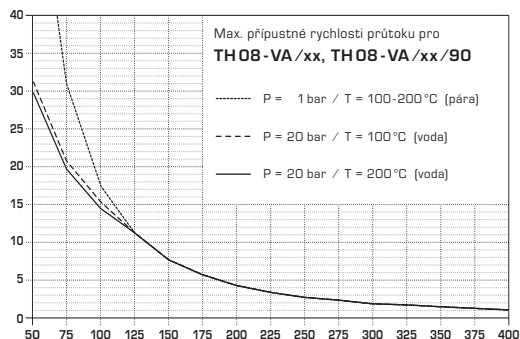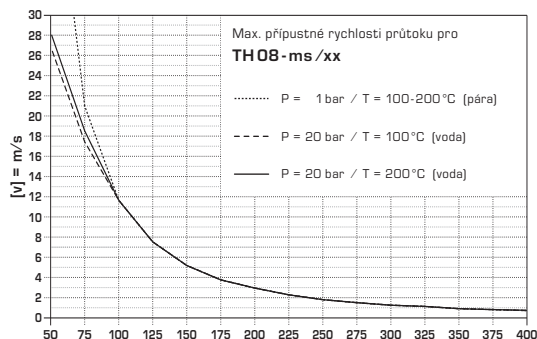

Very quickly responding screw-in resistance thermometer / immersion temperature sensor
THERMASGARD® ETF 7 with passive output, neck tube and a single-tapered stainless steel protective tube, housing cover with quick-locking screws, very short reaction time, particularly suitable for very quick temperature changes and control operations, e.g. in hydraulic systems.

TECHNICAL DATA	
Measuring range:	-35...+150 °C
Sensors / output:	see table, passive (Perfect Sensor Protection)
Response times:	$t_{0,5} = 2.8\text{ s}$ $t_{0,9} = 10\text{ s}$ (for water at a flow rate of 2 m/s)
Connection type:	2-wire connection (4-wire connection on PT100, optional on other sensors)
Testing current:	< 0.6 mA (Pt1000) < 1.0 mA (Pt100) < 0.3 mA (Ni1000, Ni1000 TK5000)
Insulating resistance:	≥ 100 MΩ, at +20 °C (500V DC)
Electrical connection:	0.14 - 1.5 mm ² via terminal screws
Cable gland:	M 16 x 1.5, including strain relief, exchangeable, max. inner diameter 10.4 mm
Housing:	plastic, UV-resistant, material polyamide, 30% glass-globe reinforced, with quick-locking screws (slotted / Phillips head combination), colour traffic white (similar to RAL 9016)
Housing dimensions:	72 x 64 x 37.8 mm (Tyr 1)
Protective tube:	stainless steel V4A (1.4571), G ½" straight pipe thread, wrench size 27 mm, $p_{max} = 6\text{ bar}$, $\varnothing = 6\text{ mm}$, single-tapered to $\varnothing = 4\text{ mm}$ (see dimensional drawing) length of neck tube (HL) = 25 mm inserted length (EL) = 100 - 250 mm (see table)
Process connection:	screwed socket with G ½" straight pipe thread
Humidity:	< 95 % r. H., non-precipitating air
Protection class:	III (according to EN 60730)
Protection type:	IP65 (according to EN 60529) Housing tested, TÜV SÜD, Report No. 713139052 (Tyr-1)

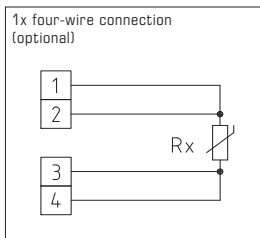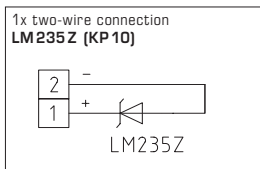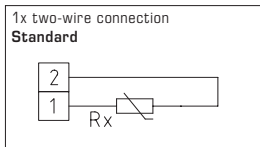

THERMASGARD® ETF 7 Screw-in / immersion temperature sensor with neck tube		
Type / WG01	Sensor / Output	Item No.
ETF7 PT100 xx	Pt100	
ETF7 PT100 100MM	Pt100 (according to DIN EN 60751, class B)	9101-2080-1023-00001
ETF7 PT100 150MM	Pt100 (according to DIN EN 60751, class B)	9101-2080-1033-00001
ETF7 PT100 250MM	Pt100 (according to DIN EN 60751, class B)	9101-2080-1053-00001
ETF7 PT1000 xx	Pt1000	
ETF7 PT1000 100MM	Pt1000 (according to DIN EN 60751, class B)	9101-2080-5021-00001
ETF7 PT1000 150MM	Pt1000 (according to DIN EN 60751, class B)	9101-2080-5031-00001
ETF7 PT1000 250MM	Pt1000 (according to DIN EN 60751, class B)	9101-2080-5051-00001
ETF7 Ni1000 xx	Ni1000	
ETF7 Ni1000 100MM	Ni1000 (according to DIN EN 43760, class B, TCR = 6180 ppm/K)	9101-2084-2021-00001
ETF7 Ni1000 150MM	Ni1000 (according to DIN EN 43760, class B, TCR = 6180 ppm/K)	9101-2084-2031-00001
ETF7 Ni1000 250MM	Ni1000 (according to DIN EN 43760, class B, TCR = 6180 ppm/K)	9101-2084-2051-00001
ETF7 Ni1000TK xx	Ni1000 TK5000	
ETF7 NITK 100MM	Ni1000 TK5000 (TCR = 5000 ppm/K), LG-Ni1000	9101-2081-0021-00001
ETF7 NITK 150MM	Ni1000 TK5000 (TCR = 5000 ppm/K), LG-Ni1000	9101-2081-0031-00001
ETF7 NITK 250MM	Ni1000 TK5000 (TCR = 5000 ppm/K), LG-Ni1000	9101-2081-0051-00001

General notes

Measuring principle of HVAC temperature sensors in general:

The measuring principle of temperature sensors is based on an internal sensor that outputs a temperature-dependent resistance signal. The type of the internal sensor determines the output signal. The following active/passive temperature sensors are distinguished:

- Pt 100 measuring resistor (according to DIN EN 60 751)
- Pt 1000 measuring resistor (according to DIN EN 60751)
- Ni 1000 measuring resistor (according to DIN EN 43 760, TCR = 6180 ppm/K)
- Ni 1000_TK 5000 measuring resistor (TCR = 5000 ppm/K)
- LM235Z, semiconductor IC (10 mV/K, 2.73 V/°C). Ensure correct polarity +/- when connecting!
- NTC (according to DIN 44070)
- PTC
- KTY silicon temperature sensors

The most important resistance characteristics are shown on the last page of these operating instructions. According to their characteristics, individual temperature sensors exhibit different slopes in the range between 0°C and +100°C (TK value). Maximum-possible measuring ranges also vary from sensor to sensor (for some examples to this see under technical data).

Design of HVAC temperature sensors in general:

Sensors are distinguished by shape type as follows: surface-contacting sensors, cable temperature sensors, and housing-type and built-in temperature sensors.

- On surface-contacting sensors, the temperature sensor has at least one contact area that must be brought in contact, e.g. with the surface of radiators or pipes. If the contact area is not positioned correctly relative to the surface to be measured, significant temperature measurement errors may occur. Good contact area and temperature conduction must be ensured, dirt and unevenness must be avoided, and heat-conductive paste is to be used where necessary.
- On cable temperature sensors, the temperature sensor is installed inside a sensor sleeve, from which a connecting cable is leading out. In addition to the standard insulating materials PVC, silicone, and fibreglass with stainless steel texture, other versions are also available that may allow a wider range of application.
- On housing-type sensors, the temperature sensor is embedded in a respective housing. Different designs of housing are available, e.g. with an external sensor sleeve (see outside temperature sensor ATF2). Housing-type sensors are normally distinguished into in-wall (FSTF) and on-wall (RTF, ATF) types and indoor and wet room versions. Connection terminals are placed on a plate inside the connecting housing.
- Duct and built-in temperature sensors are distinguished into temperature sensors with interchangeable measuring insert and without interchangeable measuring insert. Connection parts are placed inside a connecting head. Standard process connection for immersion sensors is a pipe thread (sizes in inches) and a mounting flange for duct sensors. However, it may be designed differently. When a built-in sensor has a neck tube, the application range is usually somewhat wider since ascending heat cannot flow directly and immediately into the connecting head. This is to be noted especially when transmitters are installed. The temperature sensor in built-in sensors is always placed inside the front part of the protective tube. On temperature sensors with short reaction times, protective tubes are stepped.

Note!

Select immersion depth for built-in sensors so that the error caused by heat dissipation stays within the admissible error margins. A standard value is: 10 x diameter of protection tube + sensor length. In connection with housing-type sensors, particularly with outdoor sensors, please consider the influence of thermal radiation. For that purpose, a sunshade and radiation protector SS-02 can be attached.

Maximum thermal load on components:

On principle, all temperature sensors shall be protected against unacceptable overheating!

Standard values for individual components and materials selected are shown for operation under neutral atmosphere and otherwise normal conditions (see table to the right).

For combinations of different insulating materials, the lowest temperature limit shall always apply.

Component max. thermal load

Connecting cable

PVC, normal +70 °C
PVC, heat-stabilized +105 °C
Silicone +180 °C
PTFE +200 °C
Fibreglass insulation with stainless steel texture +400 °C

Housing / Sensor

see table "Technical Data"

Resistance characteristics of passive temperature sensors (see last page)

In order to avoid damages/errors, preferably shielded cables are to be used.

Laying measuring cables parallel with current-carrying cables must in any case be avoided. EMC directives shall be observed!

These instruments must be installed by authorised specialists only!

Limiting deviation according to classes:

Tolerances at 0°C:

Platinum sensors (Pt100, Pt1000):

DIN EN 60751, class B ± 0.3 K
1/3 DIN EN 60751, class B ± 0.1 K

Nickel sensors:

Ni1000 DIN EN 43760, class B ± 0.4 K
Ni1000 1/2 DIN EN 43760, class B ± 0.2 K
Ni1000 TK5000 ± 0.4 K

ATTENTION, NOTE! Testing current influences the thermometer's measuring accuracy due to intrinsic heating and therefore, should never be greater than as specified below:

Sensor current, maximum

	I_{max}
Pt1000 (thin-layer)	< 0.6 mA
Pt100 (thin-layer)	< 1.0 mA
Ni1000 (DIN), Ni1000 TK5000	< 0.3 mA
NTC xx	< 2 mW
LM235Z	400 µA .. 5 mA
KTY 81 -210	< 2 mA

GB Installation and Commissioning

Devices are to be connected under dead-voltage condition. Devices must only be connected to safety extra-low voltage. Consequential damages caused by a fault in this device are excluded from warranty or liability. These devices must be installed and commissioned by authorised specialists. The technical data and connecting conditions shown on the device labels and in the mounting and operating instructions delivered together with the device are exclusively valid. Deviations from the catalogue representation are not explicitly mentioned and are possible in terms of technical progress and continuous improvement of our products. In case of any modifications made by the user, all warranty claims are forfeited. Operating this device close to other devices that do not comply with EMC directives may influence functionality. This device must not be used for monitoring applications, which serve the purpose of protecting persons against hazards or injury, or as an EMERGENCY STOP switch for systems or machinery, or for any other similar safety-relevant purposes.

Dimensions of housing or housing accessories may show slight tolerances on the specifications provided in these instructions.

Modifications of these records are not permitted.

In case of a complaint, only complete devices returned in original packing will be accepted.

Our "General Terms and Conditions for Business" together with the "General Conditions for the Supply of Products and Services of the Electrical and Electronics Industry" (ZVEI conditions) including supplementary clause "Extended Retention of Title" apply as the exclusive terms and conditions."

Notes regarding mechanical mounting and attachment:

Mounting shall take place while observing all relevant regulations and standards applicable for the place of measurement (e.g. such as welding instructions, etc.). Particularly the following shall be regarded:

- VDE / VDI directive technical temperature measurements, measurement set-up for temperature measurements.
- The EMC directives must be adhered to.
- It is imperative to avoid parallel laying of current-carrying lines.
- We recommend to use shielded cables with the shielding being attached at one side to the DDC / PLC.

Before mounting, make sure that the existing thermometer's technical parameters comply with the actual conditions at the place of utilization, in particular in respect of:

- Measuring range
- Permissible maximum pressure, flow velocity
- Installation length, tube dimensions
- Oscillations, vibrations, shocks are to be avoided (< 0.5 g)

Attention! In any case, please observe the mechanical and thermal load limits of protective tubes according to DIN 43763 respectively according to specific S+S standards!

Notes regarding process connection of built-in sensors:

If possible, select material of protective tube to match the material of piping or tank wall, in which the thermometer will be installed!

Maximum temperatures T_{max} and maximum pressures p_{max} are as follows:
 TH-MS brass sleeves $T_{max} = +150^{\circ}C$, $p_{max} = 10$ bar and for
 TH-VA stainless steel sleeves (standard) $T_{max} = +400^{\circ}C$, $p_{max} = 40$ bar.

Screw-in threads:

Ensure appropriate support of the gasket or sealing material when mounting! Permissible tightening torque standard values for screw-in threads, are as follows:

M 18 x 1.5; M 20 x 1.5; pipe thread G ½" : 50 Nm
 M 27 x 2.0; pipe thread G ¾" : 100 Nm

Flange mounting:

In case of flange mounting, screws in the flange part must be equally tightened. The lateral pressure screw must clamp securely, otherwise the feeler shaft might slip through.

Welding sleeves:

Specific welding instructions shall be observed.

On principle, unevenness or the like that might influence the system's "CIP ability" must not develop at welds.

For high-pressure lines, pressure test certifications and inspections are required.

Notes on commissioning:

This device was calibrated, adjusted and tested under standardised conditions. When operating under deviating conditions, we recommend performing an initial manual adjustment on-site during commissioning and subsequently at regular intervals.



Commissioning is mandatory and may only be performed by qualified personnel!

Permissible approach velocities (flow rates) for crosswise approached protective tubes in water.

The approaching flow causes protective tube to vibrate. If specified approach velocity is exceeded even by a marginal amount, a negative impact on the protective tube's service life may result (material fatigue). Discharge of gases and pressure surges must be avoided as they have a negative influence on the service life and may damage the protective tubes irreparably.

Please observe maximum permissible approach velocities

for stainless steel protective tubes 8x0.75 mm [1.4571] (see graph TH08-VA/xx, TH08-VA/xx/90) as well as for brass protective tubes 8x0.75 mm (see graph TH08-ms/xx):

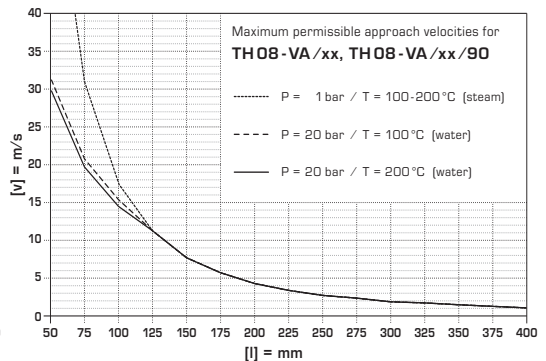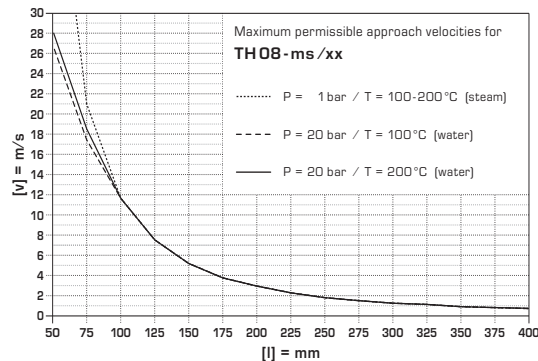



S+S REGELTECHNIK

Výrobce / Manufacturer:

S+S Regeltechnik GmbH, Thurn-und-Taxis-Str. 22,
90411 Nürnberg / Germany, Tel. +49 911 51947-0,
Fax +49 911 51947-70, mail@SplusS.de, www.SplusS.de

© Copyright by S+S Regeltechnik GmbH

Zákaz částečného či úplného kopírování bez svolení S+S Regeltechnik GmbH.
Reprint in full or in parts requires permission from S+S Regeltechnik GmbH.

Chyby a technické změny vyhrazeny. Všechny údaje odpovídají stavu znalostí k datu zveřejnění. Slouží pouze k informaci o našich produktech a možnostech jejich použití, nezaručují však určité vlastnosti produktu. Jelikož produkty mohou být nasazovány za nejrůznějších podmínek a zatížení, které nemůžeme ovlivnit, musí zákazník nebo uživatel vždy provést korekci pro konkrétní případ aplikace. Respektujte vlastnická práva. Bezchybnou kvalitu zaručujeme v rámci našich Všeobecných obchodních podmínek.

Subject to errors and technical changes. All statements and data herein represent our best knowledge at date of publication. They are only meant to inform about our products and their application potential, but do not imply any warranty as to certain product characteristics. Since the devices are used under a wide range of different conditions and loads beyond our control, their particular suitability must be verified by each customer and/or end user themselves. Existing property rights must be observed. We warrant the faultless quality of our products as stated in our General Terms and Conditions.

Odporové charakteristiky pro pasivní snímače teploty
Resistance characteristics of passive temperature sensors

°C	PT 100	PT 1000	Ni 1000	Ni 1000 TK 5000	FeT (T1)	KTY 81-210	LM235Z (KP10)	°C
	Ω	Ω	Ω	Ω	Ω	Ω	mV	
- 50	80.3	803	743	790.8	-	1030	-	- 50
- 40	84.3	843	791	826.8	-	1135	2330	- 40
- 30	88.2	882	842	871.7	1935	1247	2430	- 30
- 20	92.2	922	893	913.4	2031	1367	2530	- 20
- 10	96.1	961	946	956.2	2128	1495	2630	- 10
0	100.0	1000	1000	1000.0	2227	1630	2730	0
+ 10	103.9	1039	1056	1044.8	2328	1772	2830	+ 10
+ 20	107.8	1078	1112	1090.7	2429	1922	2930	+ 20
+ 30	111.7	1117	1171	1137.6	2534	2080	3030	+ 30
+ 40	115.5	1155	1230	1185.7	2639	2245	3130	+ 40
+ 50	119.4	1194	1291	1235.0	2746	2417	3230	+ 50
+ 60	123.2	1232	1353	1285.4	2856	2597	3330	+ 60
+ 70	127.1	1271	1417	1337.1	2967	2785	3430	+ 70
+ 80	130.9	1309	1483	1390.1	3079	2980	3530	+ 80
+ 90	134.7	1347	1549	1444.4	3195	3182	3630	+ 90
+ 100	138.5	1385	1618	1500.0	3312	3392	3730	+ 100
+ 110	142.3	1423	1688	1557.0	3431	3607	3830	+ 110
+ 120	146.1	1461	1760	1625.4	3552	3817	3930	+ 120
+ 130	149.8	1498	1833	-	3676	4008	-	+ 130
+ 140	153.6	1536	1909	-	3802	4166	-	+ 140
+ 150	157.3	1573	1987	-	3929	4280	-	+ 150

°C	NTC 1.8 kΩ	NTC 2.2 kΩ	NTC 3 kΩ	NTC 5 kΩ	NTC 10 kΩ	NTC 10 kΩ PRE	NTC 20 kΩ	NTC 50 kΩ	°C
	Ω	Ω	Ω	Ω	Ω	Ω	Ω	Ω	
- 50	-	-	-	-	-	-	-	-	- 50
- 40	39073	-	-	-	-	-	806800	2017000	- 40
- 30	22301	27886	53093	88488	175785	135200	413400	1033500	- 30
- 20	13196	16502	29125	48541	96597	78910	220600	551500	- 20
- 10	8069	10070	16599	27664	55142	47540	122260	305650	- 10
0	5085	6452	9795	16325	32590	29490	70140	175350	0
+ 10	3294	4138	5971	9951	19880	18790	41540	103850	+ 10
+ 20	2189	2719	3747	6246	12491	12270	25340	63350	+ 20
+ 30	1489	1812	2417	4028	8058	8196	15886	39715	+ 30
+ 40	1034	1248	1597	2662	5329	5594	10212	25530	+ 40
+ 50	733	876	1081	1801	3605	3893	6718	16795	+ 50
+ 60	529	626	746	1244	2489	2760	4518	11295	+ 60
+ 70	389	454	526	876	1753	1900	3098	7745	+ 70
+ 80	290	335	346	627	1256	1457	2166	5415	+ 80
+ 90	220	251	275	458	915	1084	1541	3852	+ 90
+ 100	169	190	204	339	678	817	1114	2785	+ 100
+ 110	131	146	138	255	509	624	818	2045	+ 110
+ 120	103	-	105	195	389	482	609	1523	+ 120
+ 130	-	-	81	151	300	377	460	1149	+ 130
+ 140	-	-	64	118	234	298	351	878	+ 140
+ 150	-	-	50	93	185	238	272	679	+ 150